

## What to do if... What to do if...

	A tire punctures	P. 640	If you have a flat tire
	The hybrid system does not start	P. 652	If the hybrid system will not start
		P. 119	Immobilizer system
		P. 658	If the vehicle 12-volt battery is discharged
	The high coolant temperature warning light flashes or comes on	P. 664	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 654	If you lose your keys
	The 12-volt battery runs out	P. 658	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 73	Side doors
		P. 77	Back door
	The horn begins to sound	P. 121	Alarm
	The vehicle is stuck in mud or sand	P. 669	If the vehicle becomes stuck
	A warning light or indicator light comes on	P. 607	If a warning light turns on or a warning buzzer sounds...



## ■ Warning lights

<b>BRAKE</b> or 	Brake system warning light (red indicator) P. 607		Electric power steering system warning light P. 609
	Charging system warning light P. 608	<b>PCS</b>	Pre-collision system warning light* P. 610
	Low engine oil pressure warning light P. 608		Slip indicator light P. 610
	High coolant temperature warning light P. 608		Brake system warning light (yellow indicator) P. 610
	Malfunction indicator lamp or 		Automatic headlight leveling system warning light P. 610
	SRS warning light P. 609		Open door warning light P. 611
<b>ABS</b> or 	ABS warning light P. 609		Low fuel level warning light P. 611
			Seat belt reminder light P. 611
			Master warning light P. 611
			Tire pressure warning light P. 612

\*: The indicator flashes to indicate a malfunction.

What to do if...

What to do if...